 


3-2. Using the air conditioning system and defogger

Front air conditioning system (without rear air conditioning system)

 
Airflow and outlets are automatically adjusted according to the temperature setting.


Press  to display the air conditioning operation screen.

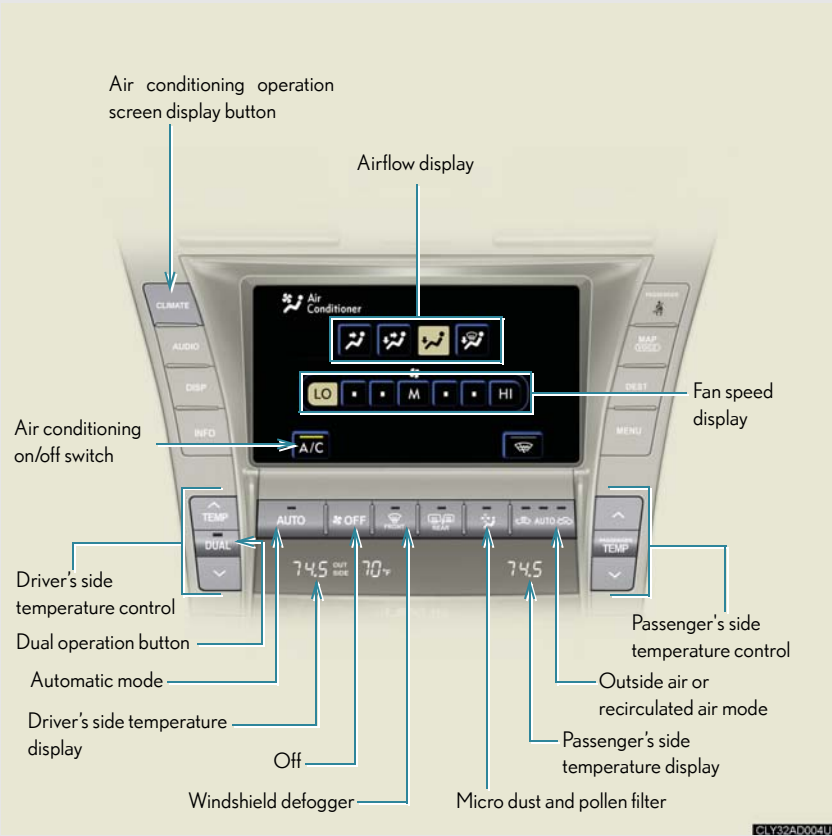

This illustration is for a vehicle equipped with the navigation system.

Using the speech command system (if equipped)

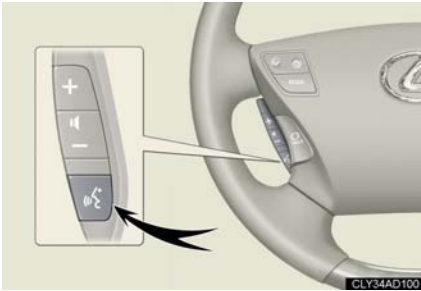


Pull  to operate the speech command system. (→“Navigation System Owner’s Manual”)



Using the automatic mode

STEP 1 Press .

➔ The air conditioning system will begin to operate. Air outlets and fan speed are automatically adjusted according to the temperature setting.

STEP 2 Press  to switch to automatic air intake mode.

➔ The air conditioning system automatically switches between outside air and recirculated air modes.



STEP 3 Press  to increase the temperature and  to decrease


the temperature.


The temperature for the driver and passenger seats can be set separately.



Adjusting the settings

n Adjusting the temperature setting

Press  to increase the temperature and  to decrease the temperature.


The air conditioning system switches between dual and simultaneous modes each time  is pressed.

Dual mode (the indicator on  is on.): The temperature for the left-hand seat and right-hand seat can be adjusted separately. Operating the passenger's side temperature control will enter dual mode.

 
Simultaneous mode (the indicator on  is off.): Only  (driver's side) can used to adjust the temperature for all seats.

n Adjusting the fan speed

Touch any switch of  (decrease ↔ increase) on the operation screen.


Press  to turn the fan off.

n Changing the air outlets

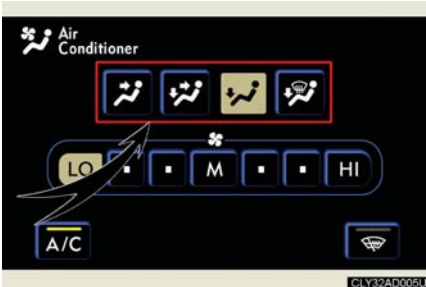


Touch any mode on the operation screen.

 
Air flows as shown below according to the mode selected.

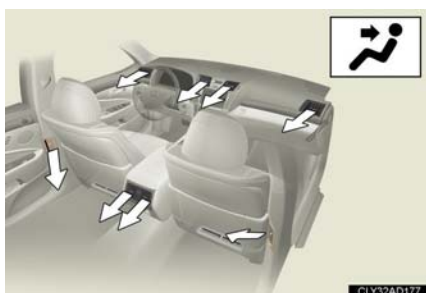


Upper body

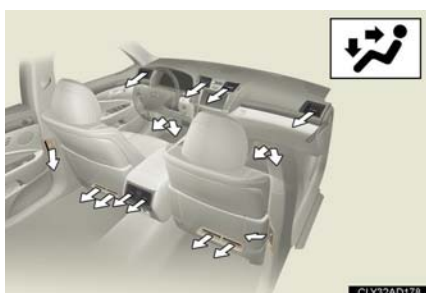 

Upper body and feet

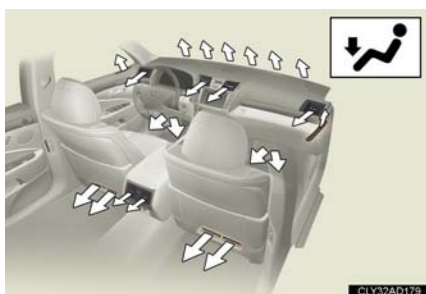 

Feet

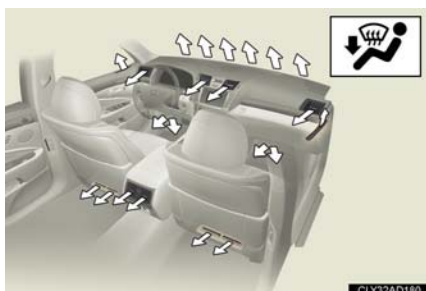 



Feet and front windshield

3-2. Using the air conditioning system and defogger

 
n Switching between outside air and recirculated air modes

Press  .

The mode switches between  (recycles air inside the vehicle), “AUTO” and  (introduces air from outside the vehicle) modes each time the button is pressed.

When the air intake control system is switched to automatic mode, it operates automatically.


Defogging the windshield

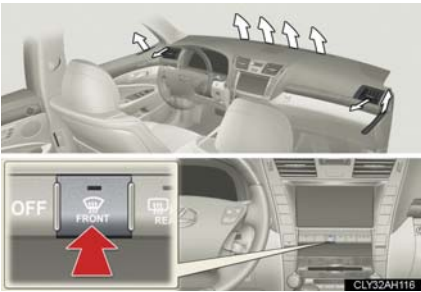


Press  .

The air conditioning system control operates automatically.

 
Micro dust and pollen filter

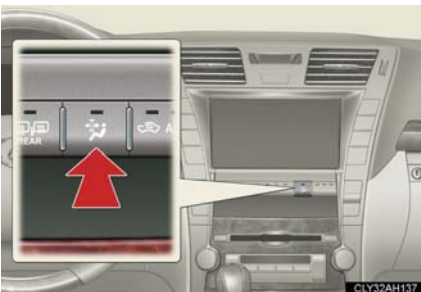

Press  .

 
Outside air mode switches to  (recirculated air) mode. Pollen is removed from the air and the air flows to the upper part of the body.


Usually the system will turn off automatically after approximately 3 minutes.

To stop the operation, press  again.

Adjusting the sensitivity of the air intake control in automatic mode


STEP 1 Press  until the “Smog Sensor” screen appears while the vehicle is stopped.

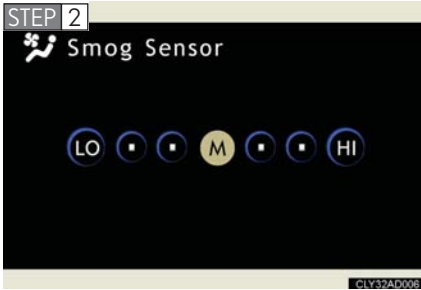

Touch any switch of  (lower sensitivity ↔ higher sensitivity) on the operation screen.

Adjusting the position and opening and closing the air outlets

 ► Front center outlets

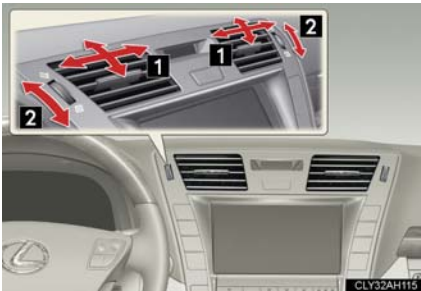

1 Direct air flow to the left or right, up or down.

2 Turn the knob to open or close the vent.

► Front side outlets

 


1 Direct air flow to the left or right, up or down.

2 Turn the knob to open or close the vent.

3-2. Using the air conditioning system and defogger

► Rear center outlets

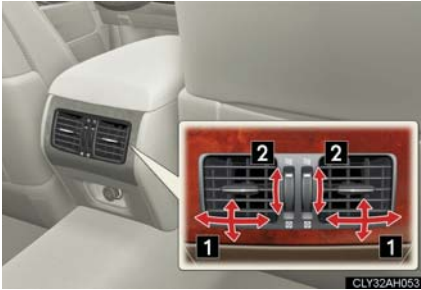

- 1 Direct air flow to the left or right, up or down.
- 2 Turn the knob to open or close the vent.


► Rear side outlets



- 1 Direct air flow to the left or right, up or down.
- 2 Turn the knob to open or close the vent.

n Using the automatic mode

Fan speed is adjusted automatically in accordance with the temperature setting and ambient conditions. As a result, the following may occur:

- 1 Immediately after  is pressed, the fan may stop for a while until warm or cool air is ready to flow.
- 1 Cool air may flow to the area around the upper body when the heater is on.


n Using the system in recirculated air mode

The windows will fog up more easily if the recirculated air mode is used for an extended period.

n Switching between outside air and recirculated air modes

Recirculated air mode or outside air mode may be automatically switched to in accordance with the temperature setting and the inside temperature.

n Window defogger feature

Recirculated air mode may automatically switch to  (outside air) mode in situations where the windows need to be defogged.

n When the hybrid battery cooling system operates

If the hybrid battery cooling system operates when the air conditioning is off, a message will be shown on the multi-information display and the air conditioning will automatically turn on. (→P. 193)


n Automatic mode for air intake control

In automatic mode, the system detects exhaust gas and other pollutants and automatically switches between outside air and recirculated air modes.

When the air conditioning is off, and the fan is operating, turning the “AUTO” mode on will activate the air conditioning system.

n Micro dust and pollen filter


1 In order to prevent the windows from fogging up when the outside air is cold, the following may occur:

- Outside air mode does not switch to .
- The air conditioning system operates automatically.
- The operation cancels after 1 minute.

1 In rainy weather, the windows may fog up. Press .

! CAUTION

n To prevent the windshield from fogging up

Do not use  during cool air operation in extremely humid weather. The difference between the temperature of the outside air and that of the windshield can cause the outer surface of the windshield to fog up, blocking your vision.

! NOTICE

n To prevent the 12-volt battery from being discharged

 
Do not leave the air conditioning system on longer than necessary when the hybrid system is off.

3-2. Using the air conditioning system and defogger

Front air conditioning system (with rear air conditioning system)


Airflow and outlets are automatically adjusted according to the temperature setting.


Press  to display the air conditioning operation screen.

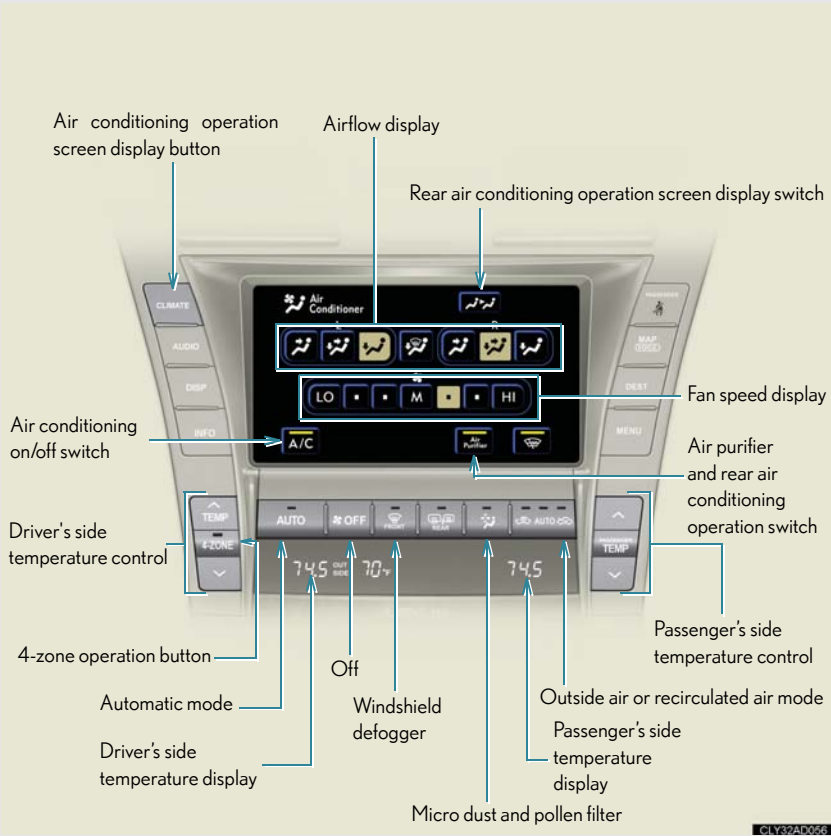

This illustration is for a vehicle equipped with the navigation system.

 Using the speech command system (if equipped)

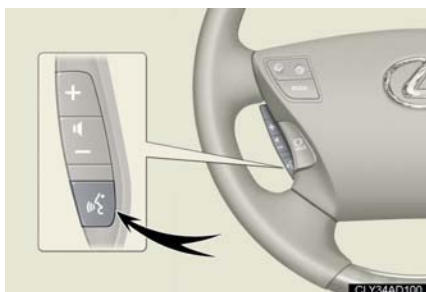


Pull  to operate the speech command system. (→“Navigation System Owner’s Manual”)



Using the automatic mode

STEP 1 Press .

➡ The air conditioning system will begin to operate. Air outlets and fan speed are automatically adjusted according to the temperature setting.

STEP 2 Press  to switch to automatic air intake mode.


➡ The air conditioning system automatically switches between outside air and recirculated air modes.


STEP 3 Press  to increase the temperature and  to decrease the temperature.


Air outlets and fan speed for the right-hand and left-hand seats may be set separately depending on the temperature setting.



Adjusting the settings

n Adjusting the temperature setting

Press \wedge on  to increase the temperature and \vee to decrease the temperature.


The air conditioning system switches between individual and simultaneous modes each time  is pressed.

Individual mode (the indicator on  is on.): The temperature for the driver's, front passenger's and rear seats (\rightarrow P. 292) can be adjusted separately. Operating the passenger's side temperature control will enter individual mode.

 
Simultaneous mode (the indicator on  is off.): Only  (driver's side) can be used to adjust the temperature for all seats.

n Adjusting the fan speed

Touch any switch of  (decrease \leftrightarrow increase) on the operation screen.

Press  to turn the fan off.

n Changing the air outlets

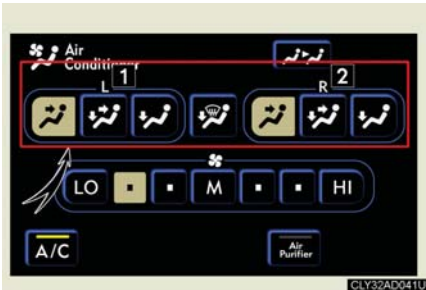


Touch any mode on the operation screen.


- 1 L: Left-hand front seat
- 2 R: Right-hand front seat

Different air outlets for the left-hand and right-hand front seats can be chosen.

 
Air flows as shown below according to the mode selected.

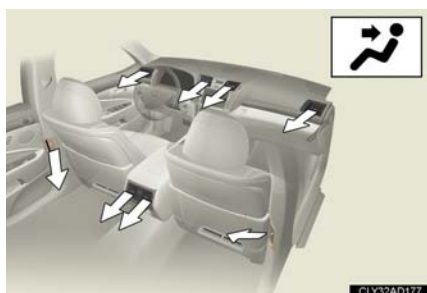


Upper body

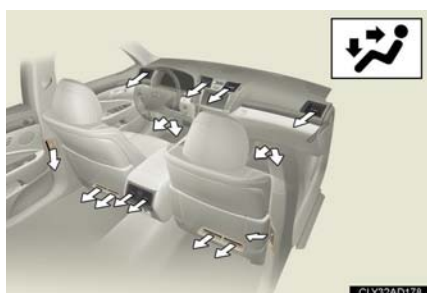 

Upper body and feet

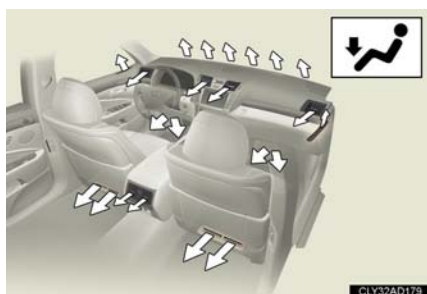 

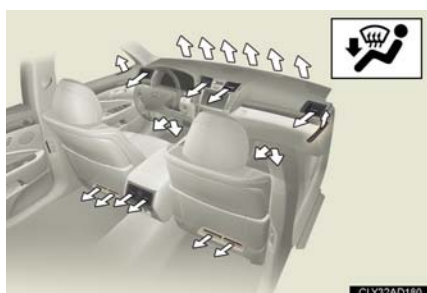 

Feet



Feet and front windshield


n Switching between outside air and recirculated air modes

Press .


The mode switches between  (recycles air inside the vehicle), “AUTO” and  (introduces air from outside the vehicle) modes each time the button is pressed.

When the air intake control system is switched to automatic mode, it operates automatically.

Turning the air purifier off

Touch  on the operation screen.

 
The air purifier will turn off when the indicator on the switch goes off. Air will not flow from the roof vents.



To turn the air purifier on, touch  again.

Changing the rear seat settings

n Adjusting the temperature setting

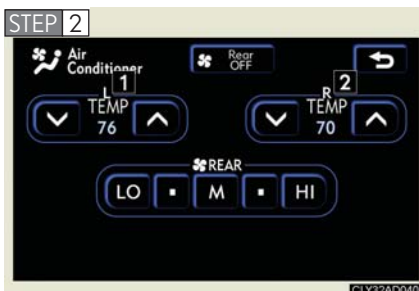
STEP 1 Touch .



Touch  (increase) or  (decrease) on the operation screen. Operating the switch will enter individual mode.

1 L: Left-hand rear seat

2 R: Right-hand rear seat

The air conditioning system switches between individual and simultaneous modes each time  is pressed.

n Adjusting the fan speed (air purifier and cool air from the roof vents)

 
STEP 1 Touch .

STEP 2 Touch any switch of  (decrease ↔ increase) on the operation screen.

According to the air outlets currently selected, the fan speed of either the cool air from the roof vents or air purifier will be adjusted.
(→P. 294)

Press  to turn the fan off.


Defogging the windshield

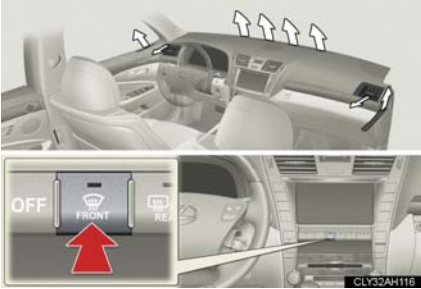


Press .

The air conditioning system control operates automatically.

 
Micro dust and pollen filter

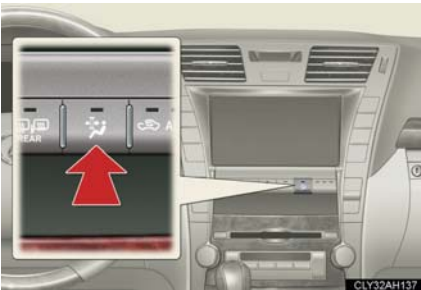

Press .

 
Outside air mode switches to  (recirculated air) mode. Pollen is removed from the air and the air flows to the upper part of the body.


Usually the system will turn off automatically after approximately 3 minutes.

To stop the operation, press  again.

Adjusting the sensitivity of the air intake control in automatic mode


STEP 1 Press  until the “Smog Sensor” screen appears while the vehicle is stopped.

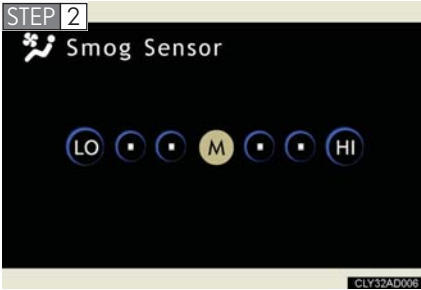

Touch any switch of  (lower sensitivity ↔ higher sensitivity) on the operation screen.

Adjusting the position and opening and closing the air outlets

 ► Front center outlets

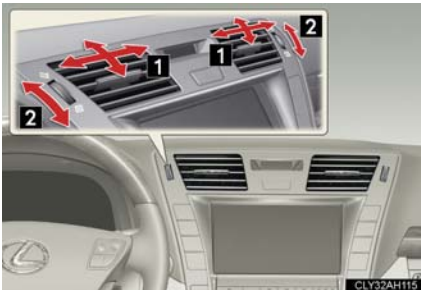

- 1** Direct air flow to the left or right, up or down.
- 2** Turn the knob to open or close the vent.

► Front side outlets




- 1 Direct air flow to the left or right, up or down.
- 2 Turn the knob to open or close the vent.

► Air outlets of the rear seat →P. 295

n Using the automatic mode


Fan speed is adjusted automatically in accordance with the temperature setting and ambient conditions. As a result, the following may occur:

- 1 The system may switch automatically to recirculated air mode when the coolest temperature setting is selected in summer.
- 1 Immediately after  is pressed, the fan may stop for a while until warm or cool air is ready to flow.
- 1 Cool air may flow to the area around the upper body when the heater is on.

n Using the system in recirculated air mode

The windows will fog up more easily if the recirculated air mode is used for an extended period.

n Window defogger feature

Recirculated air mode may automatically switch to  (outside air) mode in situations where the windows need to be defogged.

n When the hybrid battery cooling system operates

If the hybrid battery cooling system operates when the air conditioning is off, a message will be shown on the multi-information display and the air conditioning will automatically turn on. (→P. 193)


n Automatic mode for air intake control

In automatic mode, the system detects exhaust gas and other pollutants and automatically switches between outside air and recirculated air modes.

When the air conditioning is off, and the fan is operating, turning the "AUTO" mode on will activate the air conditioning system.

n Micro dust and pollen filter

1 In order to prevent the window from fogging up when the outside air is cold, the following may occur:

- Outside air mode does not switch to .
- The air conditioning system operates automatically.
- The operation cancels after 1 minute.


1 In rainy weather, the windows may fog up. Press .

n Air purifier

The air purifier will turn on when turning the rear air conditioning system on.

CAUTION

n To prevent the windshield from fogging up

Do not use  during cool air operation in extremely humid weather. The difference between the temperature of the outside air and that of the windshield can cause the outer surface of the windshield to fog up, blocking your vision.

NOTICE

n To prevent the 12-volt battery from being discharged

 
Do not leave the air conditioning system on longer than necessary when the hybrid system is off.

3-2. Using the air conditioning system and defogger

Rear air conditioning system*


Airflow and outlets are automatically adjusted according to the temperature setting.

► 5-seat models

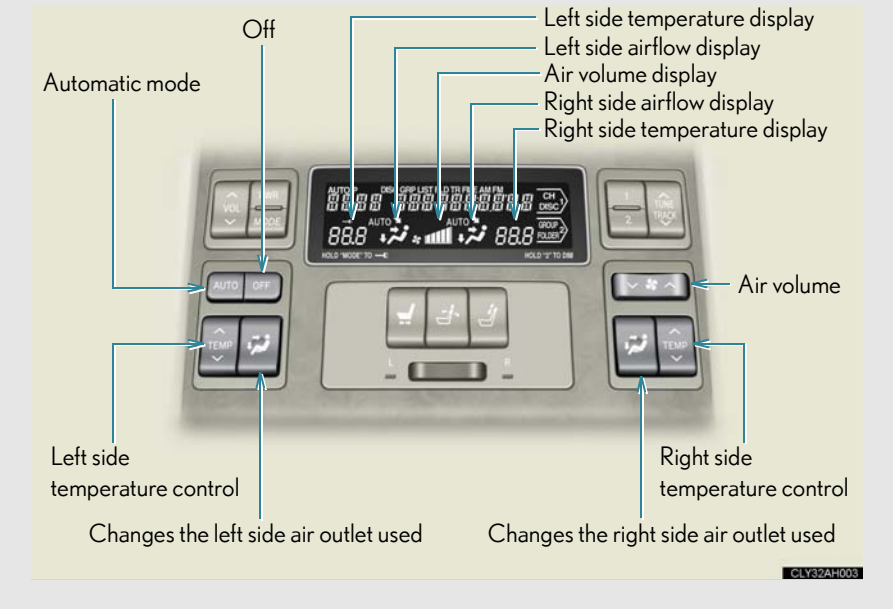

*: If equipped

 ► 4-seat models

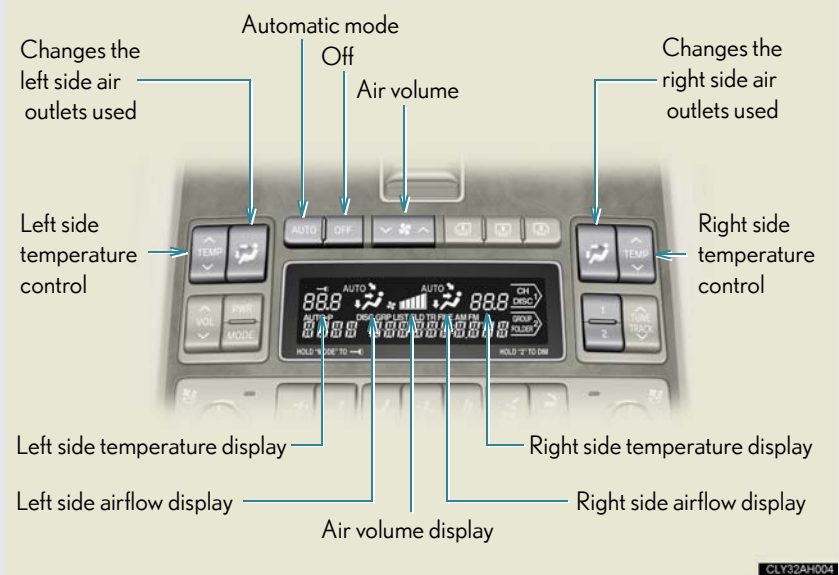




Using the automatic mode

STEP 1 Press .

➡ The air conditioning system and air purifier will operate, and air outlets and fan speed will be set automatically.




“AUTO” will be displayed on the control panel.

STEP 2 Press  on  to increase the temperature and  to decrease the temperature.

Air outlets and fan speed for the right-hand and left-hand seats may be set separately depending on the temperature setting.

Adjusting the settings

n Adjusting the temperature setting

Press  on  to increase the temperature and  to decrease the temperature.

Air outlets and fan speed for the right-hand and left-hand seats may be set separately depending on the temperature setting.

n Changing the air outlets

Press .


The air outlets change as follows each time the  is pressed.

Different air outlets for the right-hand and left-hand rear seats can be chosen.

Air flows as shown below according to the mode selected.




Upper body

When the indicator on  (on the front operation screen) is on



Upper body

When the indicator on  (on the front operation screen) is off



Upper body and feet


3-2. Using the air conditioning system and defogger



Feet

 
n **Adjusting the air volume**

The volume of cool air or air from the air purifier can be adjusted according to the mode selected.


Press ^ (increase) or v (decrease) on .



Cool air flows from roof vents.

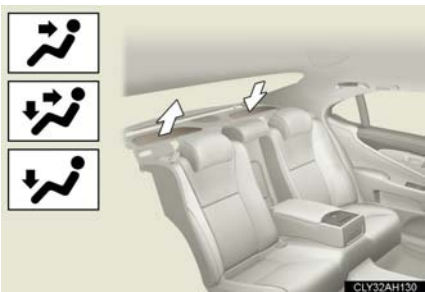


Air purifier operation (air flows from the rear package tray.)

Press  to turn the fan off.

Adjusting the position and opening and closing the air outlets

 ► Rear center outlets

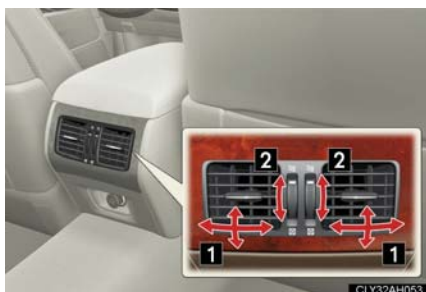


- 1 Direct air flow to the left or right, up or down.
- 2 Turn the knob to open or close the vent.

► Rear side outlets



- 1 Direct air flow to the left or right, up or down.
- 2 Turn the knob to open or close the vent.

 ► Roof side outlets

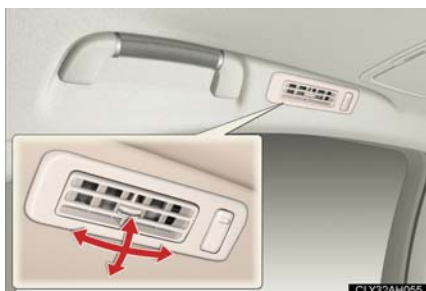

- 1 Direct air flow to the left or right, up or down.

n Button lock function

► 5-seat models



To prevent inadvertent operation, the buttons on the rear armrest can be locked. Press **MODE** until you hear a beep to lock the buttons. Pressing **MODE** again until you hear a beep will release the lock.

The indicator appears on the display when the buttons are locked.

► 4-seat models



n Rear control panel illumination off function

► 5-seat models



Control panel illumination on the rear armrest can be turned off. Press **2** until you hear a beep to turn the illumination off. Pressing **2** again until you hear a beep will turn the illumination on.

► 4-seat models



n Replacing the rear air conditioning filter

Replacing the air filter when using rear air conditioning or air purifier reduces air flow or deodorizing performance. (→P. 558)

⚠ NOTICE

 
n To prevent the 12-volt battery from being discharged

Do not leave the air conditioning system on longer than necessary when the hybrid system is off.

3-2. Using the air conditioning system and defogger

Rear window and outside rear view mirror defoggers

These features are used to defog the rear window, and to remove rain-drops, dew and frost from the outside rear view mirrors.

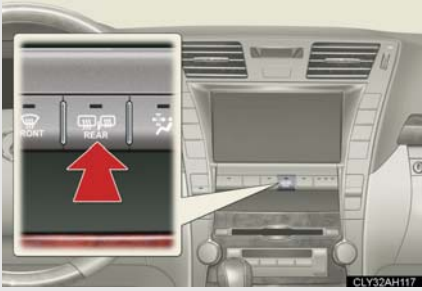

On/off

Press the button to turn on the rear window and outside rear view mirror defoggers. The defoggers will automatically turn off after approximately 15 minutes. Pressing the button again also turns the defoggers off.

CAUTION

n When the outside rear view mirror defoggers are on

 
Do not touch the outside surface of the rear view mirrors, as they can become very hot and burn you.

3-2. Using the air conditioning system and defogger


Windshield wiper de-icer*

This feature is used to prevent ice from building up on the windshield and wiper blades.

► Vehicles without navigation system

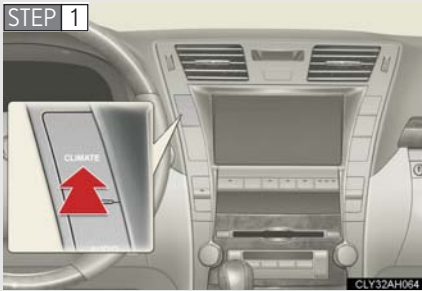

Press

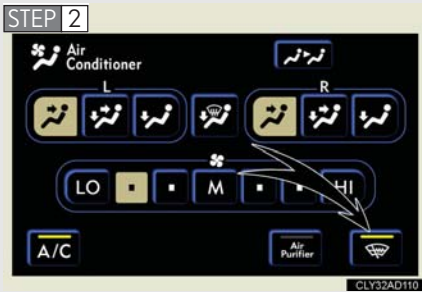 


On/off

Touch the switch to turn on the windshield wiper de-icer. The windshield wiper de-icer will automatically turn off after approximately 15 minutes. Touching the switch again also turns the de-icer off.

3-2. Using the air conditioning system and defogger

► Vehicles with navigation system

 
STEP 1

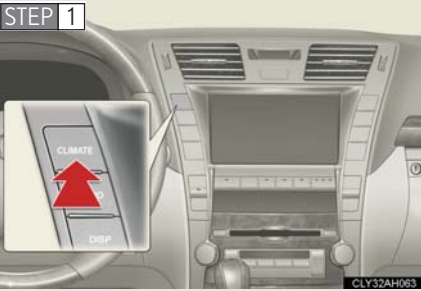

Press



 STEP 2

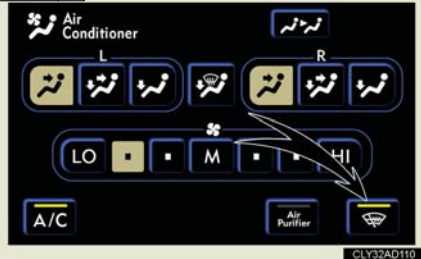

On/off

Touch the switch to turn on the windshield wiper de-icer. The windshield wiper de-icer will automatically turn off after approximately 15 minutes. Touching the switch again also turns the de-icer off.

! CAUTION

n When the windshield wiper de-icer is on

Do not touch the glass at the lower part of the windshield or to the side of the front pillars as the surfaces can become very hot and burn you.